


## Installation Manual

### STEP 1

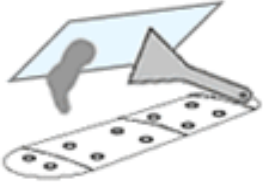

Determine the location of the Speed hump and sweep the surface clean of debris / dust. Use chalk to mark the center lines (parallel and perpendicular to the direction of the street) and border lines on the surface.

### STEP 2



Assemble and position the units, starting from the center line (parallel to the direction of the street).


**Note:** Make sure the units are tight and well aligned before moving on to step 3

### STEP 3



Drill 12MM diameter holes into the surface, through the existing holes of the placed units. The holes should be 120-140MM deep in order to accommodate the plastic shields that are 100MM long.

### STEP 4

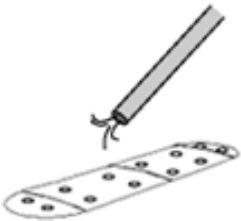

Make sure the holes are clear of dust and debris before installing the shields. After each hole is drilled, insert a plastic shield in order to keep the units from shifting.

**Note:** (A portable blower is useful for this purpose)

### STEP 5



Insert the bolts and steel washers into the product installation holes and tighten every element.